



Dot matrix, multi-function LCD

Zone | Channel #

Channel name

Microphone Jack

Dot matrix, multi-function LCD

ch-01 Icom Inc.

NEVER connect non-specified microphones. The pin assignments may be different and the transceiver may be damaged.

AF Volume: Control Knob

Rotate the knob to adjust desired audio output level. Minimum audio level is pre-programmed.

2 P0: Display Frequency Programmable Key

Push the button, then use the "up" & "down" buttons on the D-Pad to select required zone.

P1: Scan Start/Stop Programmable Key Push to start and cancel scanning operation.

When Power ON Scan function is activated, push to pause the scanning operation.

Push and hold this key for 1 sec. to indicate the scan list, then push [CH Up] or [CH Down] to select the desired list.

P2: Scan Add/Delete Programmable Key
Push to add or delete the selected channel to/from

the scan group.

Speaker

- Push to indicate the scan group, then push [CH Up] or [CH Down] to select the desired group.
- 2. Push to add or delete the channel to/from the selected scan group.
- 3. Push and hold for 1 second to exit the scan group selection mode.

5 **P3 & P4** : Zone Up/Down 9

Push any of these keys, then select the desired zone using [CH Up]/ [CH Down].

6 Up / Down Keys : CH Up / CH Down

- · Push to select an operating channel.
- Push to select a transmit code channel after pushing [TX Code CH Select].
- Push to select a DTMF channel after pushing [DTMF Autodial].
- Push to select a scan group after pushing and hold ng [Scan A Start/Stop]/[Scan B Start/ Stop] for 1 sec.

Power Switch

Push and hold for 1 second to turn the power ON and OFF.

• Automatic scan start, Password prompt and Set mode access are also available at power ON.



Got Questions? Contact us!

Programmable Key

Since 1993, we've specialized in programming, repairing, and installing mobile two-way radios similar to yours. If you have any questions or need further assistance, don't hesitate to reach out to us. We're here to help.





